


# NOVA LUCE


9117303 9117305  
9117307 9117309

1

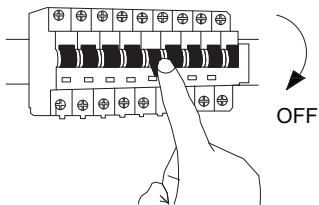


Turn off the general switch

2

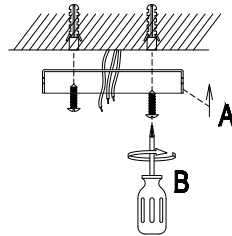


Drill holes & apply plastic anchors  
With screws

3

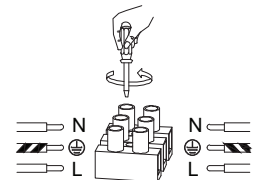


Connect the wires

4

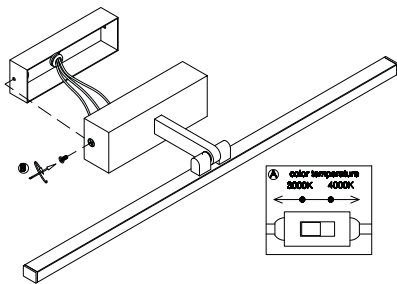

Apply the side screws

5

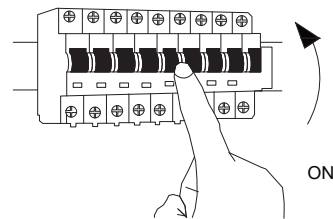

Turn on the general switch

