



NOVA LUCE

9081104 9081105




1

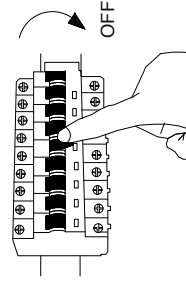


Turn off the general switch

2

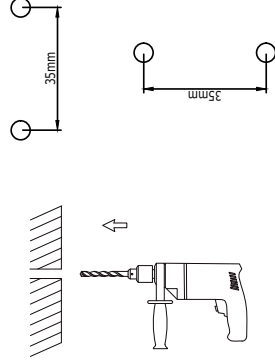


Make a 0.6 cm CutOut

3

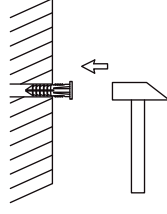


Apply plastic anchors

4

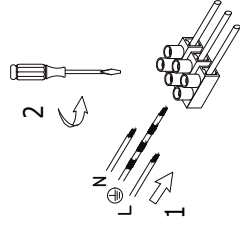


Connect the wires

5

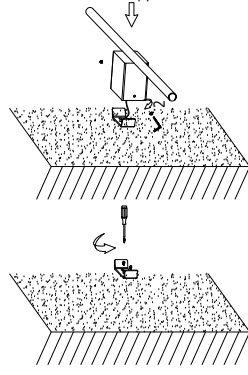

Apply the element in to place

6

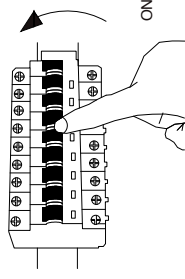

Turn on general switch

