


# NOVA LUCE


9232208 9232209  
9232210 9232211

1

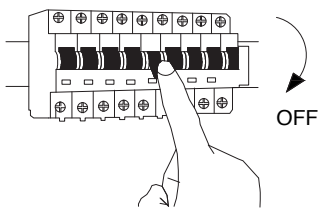


Turn off the general switch

2

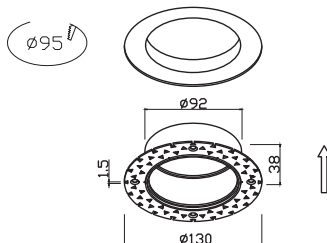


Make a hole

3

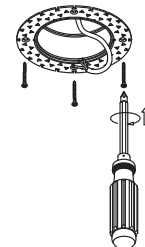


Apply screws

4

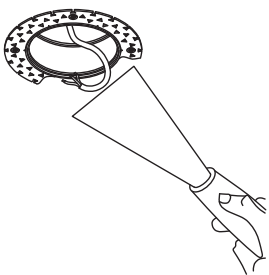


Apply putty powder

5

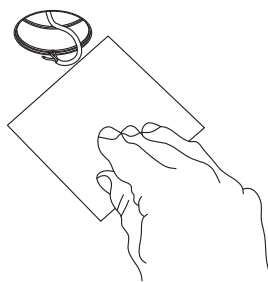

Make the surface smooth

6

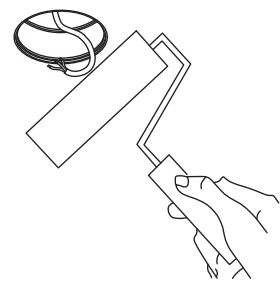


Paint

7




Clean the access

8

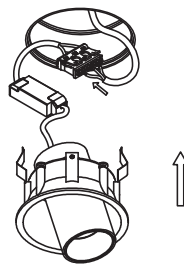

Apply the product in to place

9

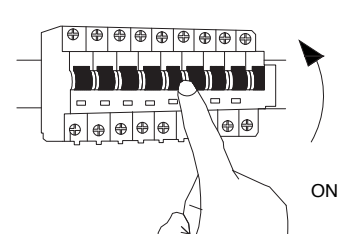

Turn on the general switch

