



NOVA LUCE

9580636/ 9580637/ 9580638




1

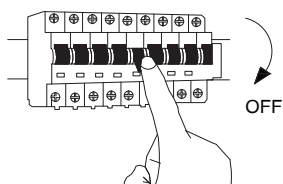


Turn off the general switch

2

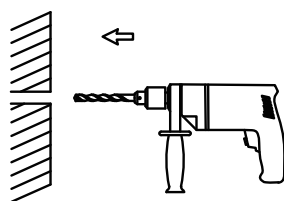


Make a 0.6 cm CutOut

3

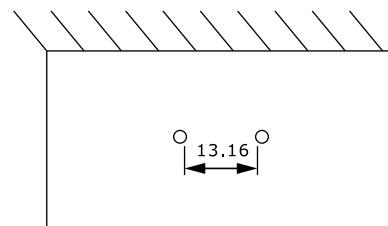


Make holes into desirable positions

4

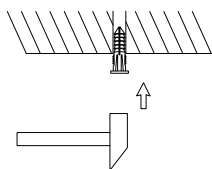


Apply plastic anchors

5

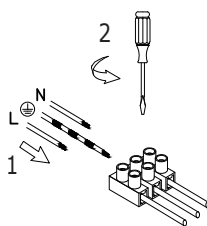


Connect the wires

6

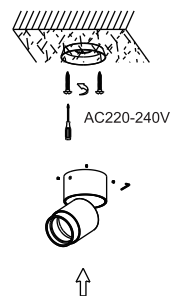

Fix product into place
by applying side screws

7

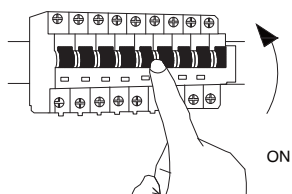

Turn on the general switch

8

