


# NOVA LUCE


9540203

1

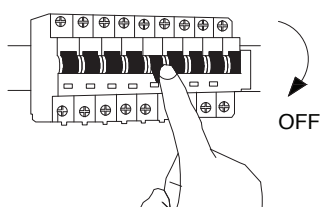


Turn off the general switch

2

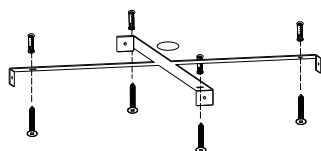


Drill holes & apply  
Plastic anchors with screws

3

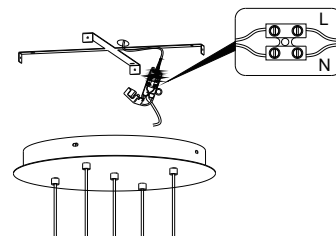


Connect the wires

4

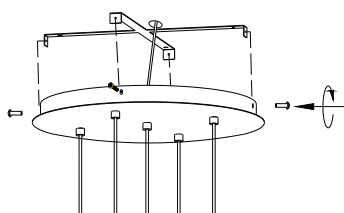


Apply the side screws

5

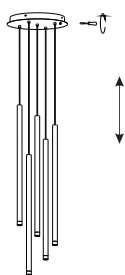

Fix it in place

6

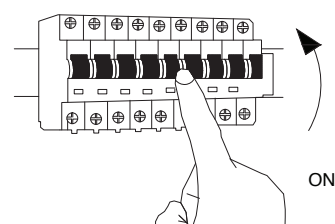

Turn on general switch

