


NOVA LUCE

9040104-9040105
9040107-9040108


1

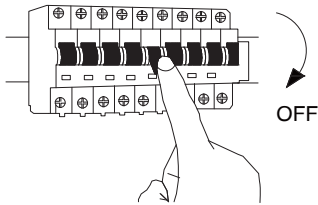

Turn off the general switch


2

Code No.	Cut Size.
9040107-9040108	Φ60mm




Create a CutOut

3

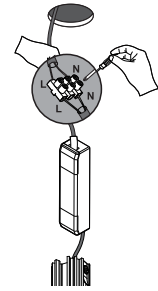


Connect wires

4

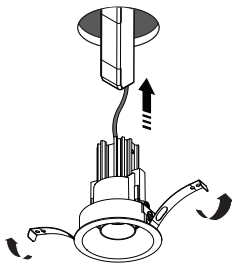

Press brackets &
Insert it into the hole

5

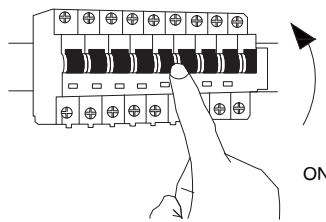

Turn on the general switch

6

