

NOVA LUCE


787002

1




Turn off the general switch

2

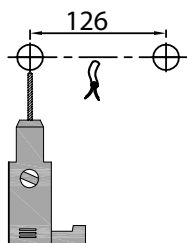


Drill holes & apply plastic anchors
With screws

3

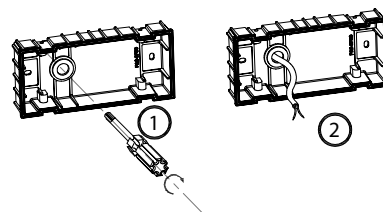


Get the wire through

4

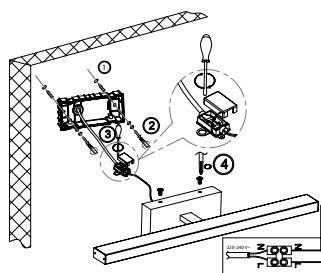


Connect the wires

5

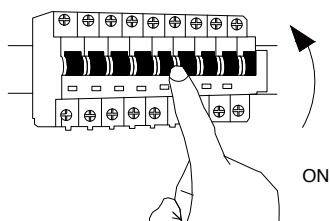

Turn on the general switch

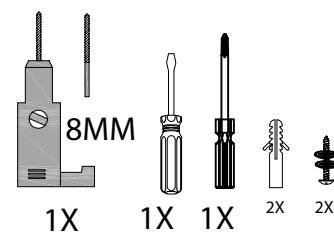

Tools

