



# NOVA LUCE

9081102, 9081103




1

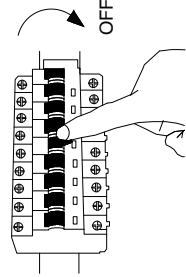


Turn off the general switch

2

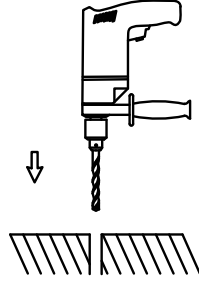


Make a 0.6 cm CutOut

3

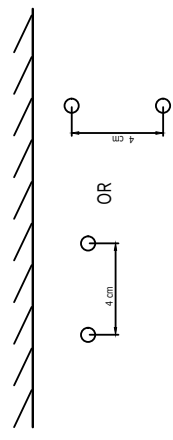


Make holes into desirable positions

4

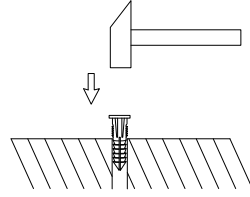


Apply plastic anchors

5

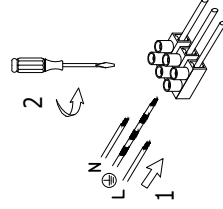


Connect the wires

7

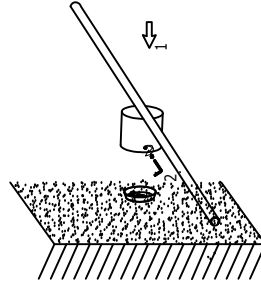


Fix product into place  
by applying side screws

6

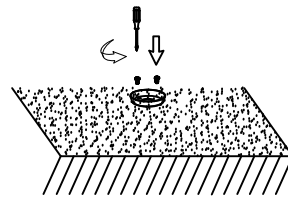

Tie up screws into place

8

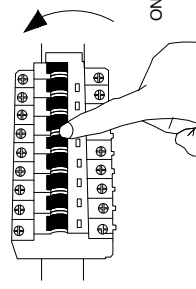

Turn on the general switch

