


# NOVA LUCE


9053301 9053302

1

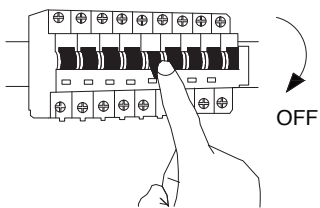


Turn off the general switch

2

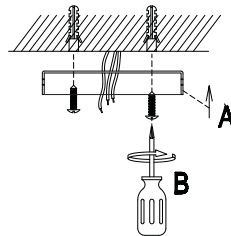


Drill holes, apply plastic anchors  
& Apply screws with a screw driver

3

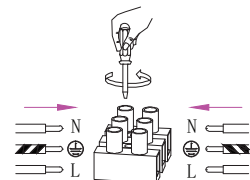


Connect the wires

4

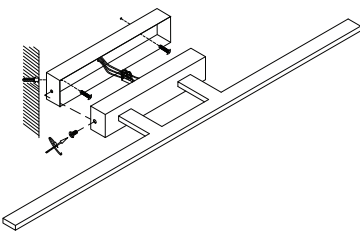

Fix it in place & apply side screws

5

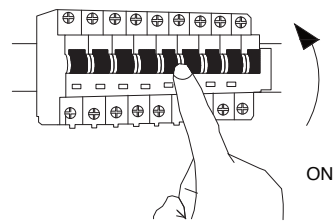

Turn on the general switch

