


# NOVA LUCE


710021

1

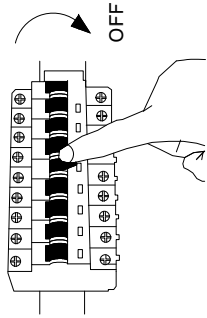


Turn off the general switch

2

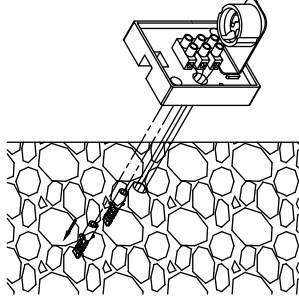


Mark, drill holes  
& apply plastic anchors

3

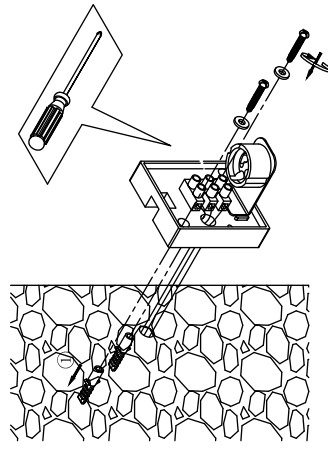


Tie up the screws into place

4

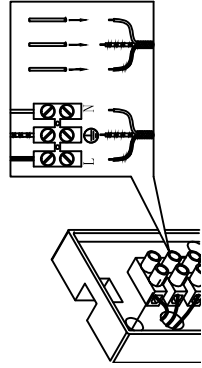


Connect wires

5

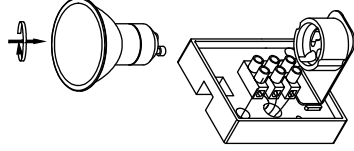


Apply the bulb by rotating

7

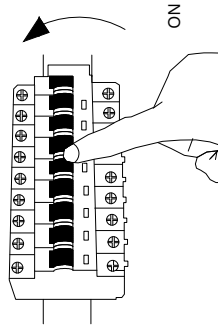

Turn on the general switch

6

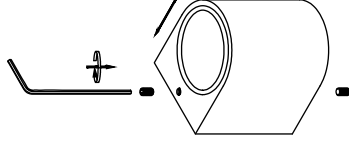

Apply the cap  
by tying up the side screws

8

