



# NOVA LUCE


9160081

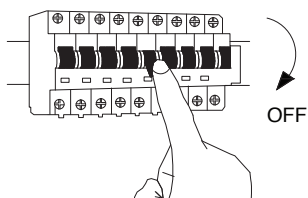


1. Turn off the general switch

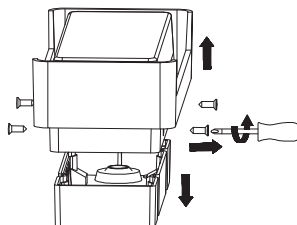


2. Untight the side screws

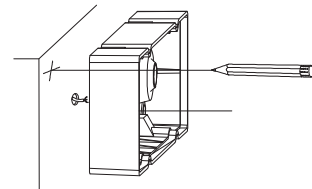


3. Mark the areas

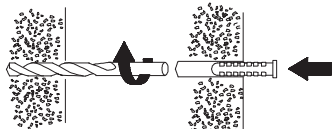


4. Drill holes & apply Plastic anchors

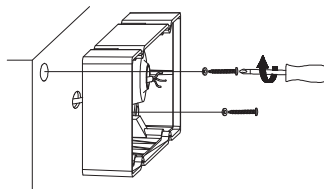


5. Apply the screws

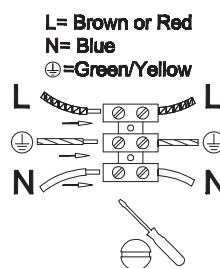


6. Connect the wires

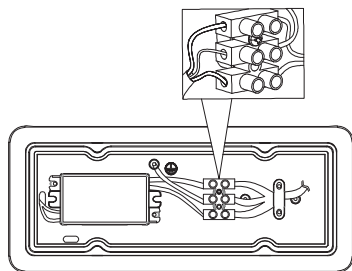

7. Place the cables in to place

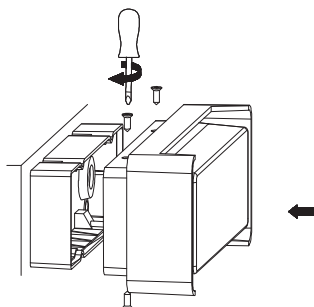

8. Apply the screws

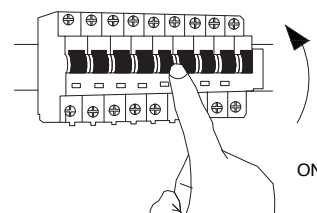

9. Turn on general switch

