


# NOVA LUCE


9879104

1

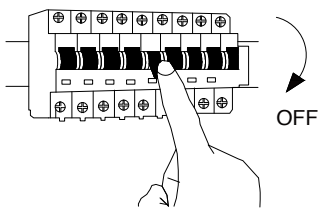


Turn off the general switch

2




Cut Out size

3

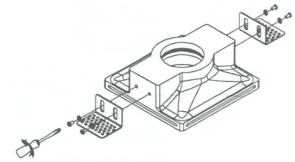


Apply screws on the sides &  
Connect the wires

4

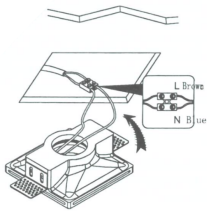


Connect the wires

5

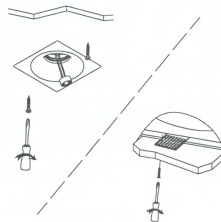

Apply screws to make it stable


6

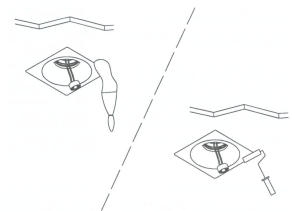

Apply putty powder as a cover



Insert the bulb

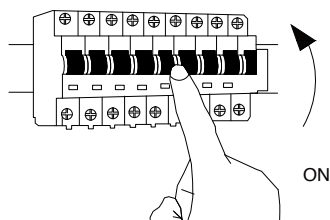

Turn on the general switch

