


NOVA LUCE


9006082 9006083

1

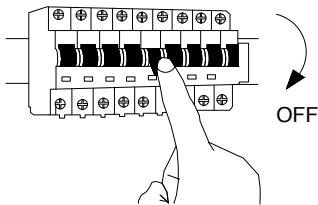


Turn off the general switch

2

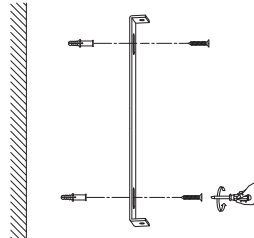


Drill holes & apply plastic anchors
With screws

3

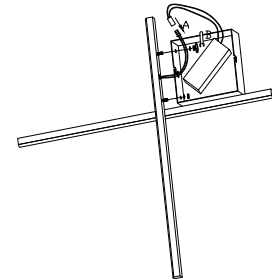


Place the screw on arm through the
Hole of the canopy box & connect the
cable, tighten the screw

4

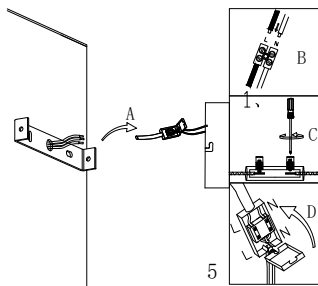


Connect the wires

5

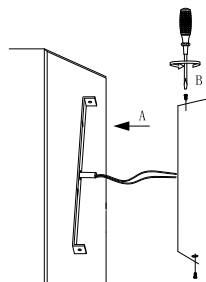

Apply the side screws

6

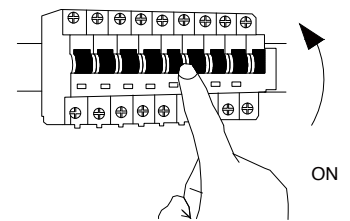

Turn on the general switch

