



NOVA LUCE


720403, 720404

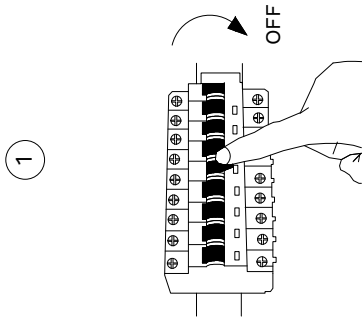


Turn off the general switch

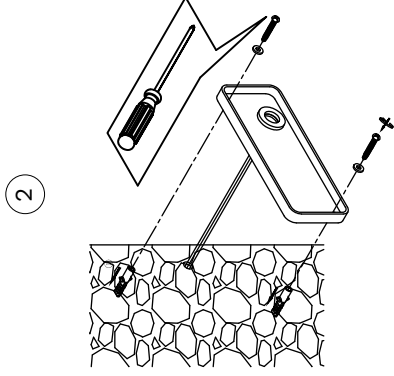


Mark, drill holes,
apply plastic anchors
& tie up screws

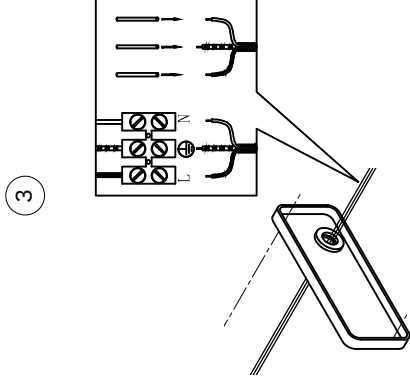

Connect wires

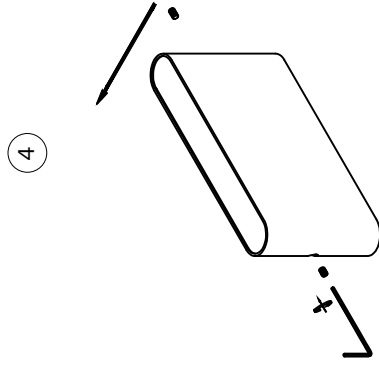

Apply the cap into place
by tying up the side screws

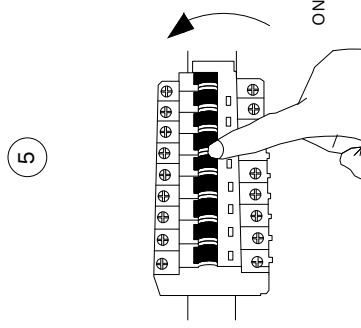

Turn on the general switch

