



NOVA LUCE

9030703 9030704




1

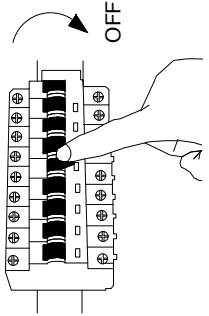


Turn off the general switch

2

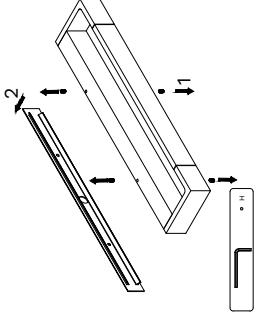


Remove the nuts

3

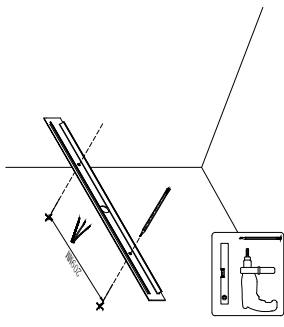


Mark where to drill

4

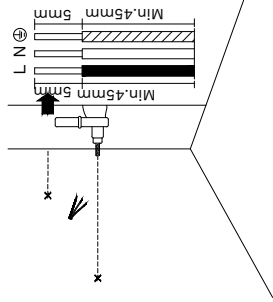


Drill holes

5

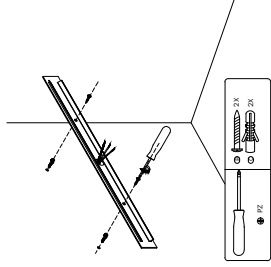


Apply plastic anchors
With screws

6

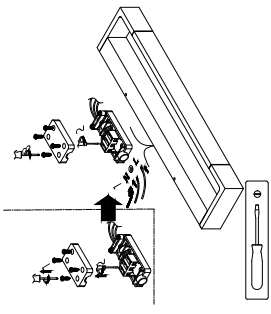


Connect wires

7

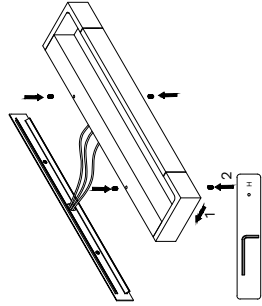


Apply nuts

8

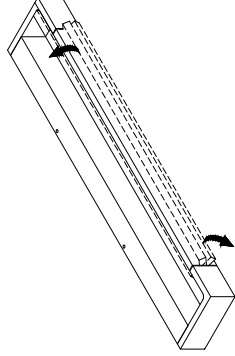

Rotatable

9

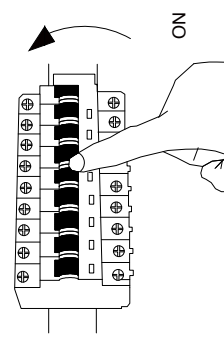

Turn on the general switch



2X

2X

1X

