


NOVA LUCE


9879105

1

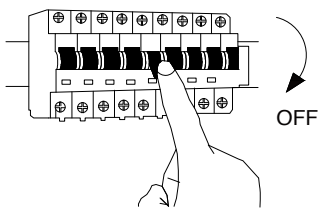


Turn off the general switch

2

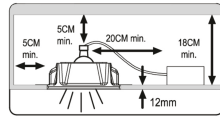


Cut Out size

3

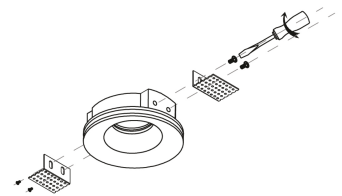


Apply screws on the sides

4

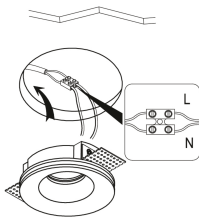


Connect wires

5

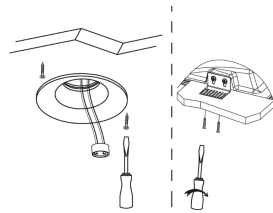


Apply screws to make it stable


6

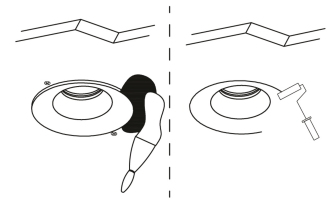

Apply putty powder as a cover

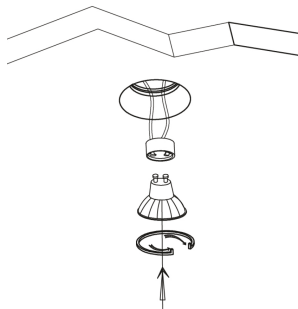

Insert the bulb

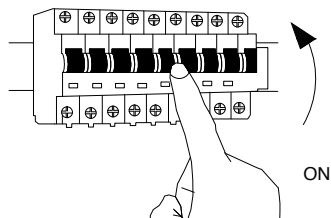

Turn on the general switch

