



1

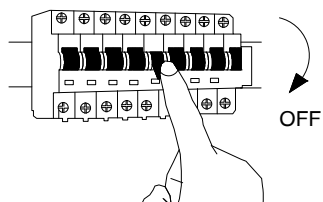


Turn off the general switch

2

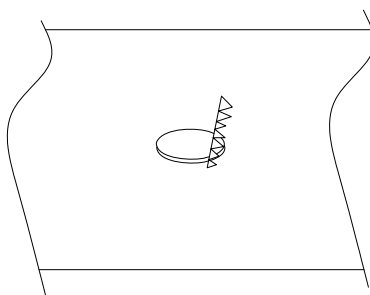


Create a 7.5 cm CutOut

3

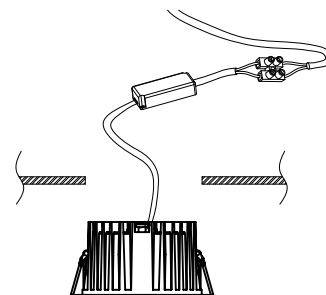


Connect the wires

4

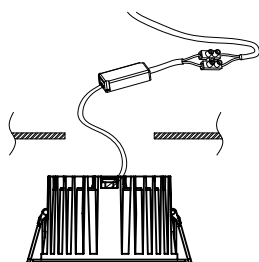

Place tha luminaire into the hole

5

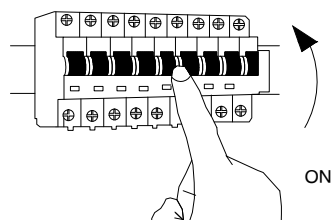

Turn on the general switch

