


# NOVA LUCE


820202, 820203

1

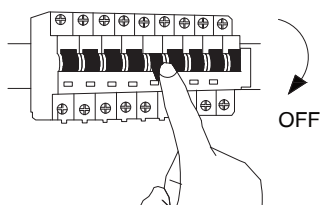

Turn off the general switch

2




Mark, drill & make holes  
Apply plastic anchors

3




Tie up screws

4

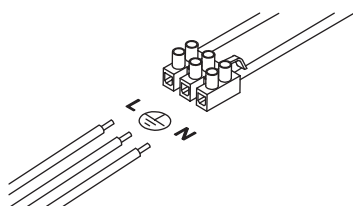


Connect the wires

5

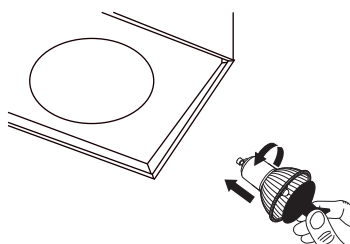


Insert bulb by rotate

6

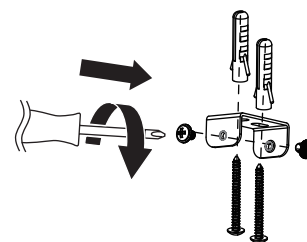

Tie up side screws

7

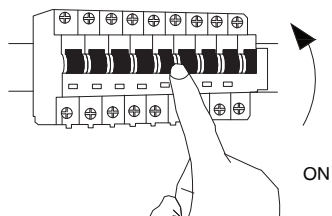

Turn on the general switch

