


NOVA LUCE


9009261

1

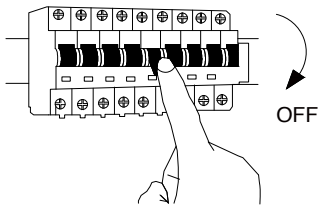


Turn off the general switch

2

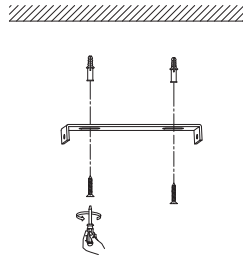


Drill holes & apply plastic anchors
With screws

3

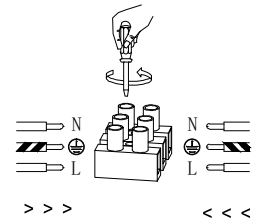


Connect the wires

4

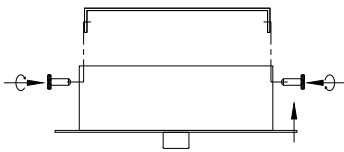


Apply the side screws

5

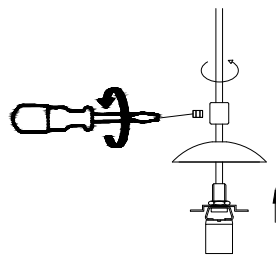


Apply the bulb

6

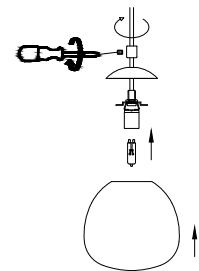

Press down the 2 pins
& Insert the glass

7

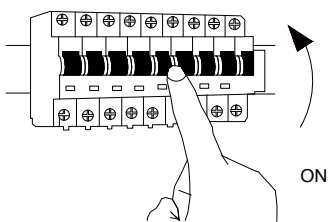

Turn on the general switch

