


# NOVA LUCE


713311

1

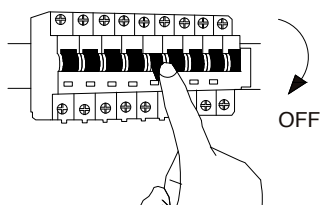


Turn off the general switch

2

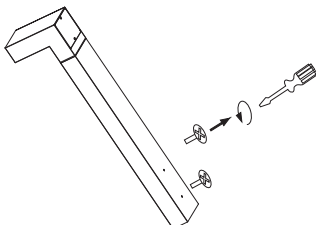


remove the nuts

3

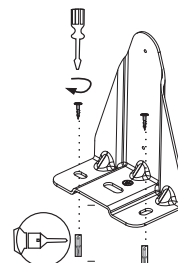


Drill holes, apply plastic anchors,  
With screws

4

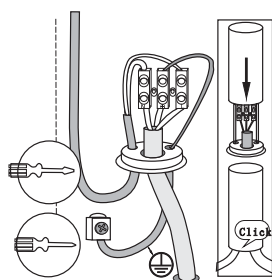


Connect the wires

5

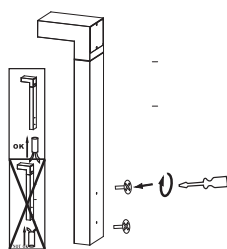

Apply the nuts

6

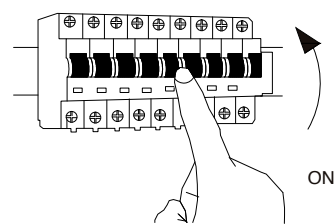

Turn on the general switch

